



BLINK USER GUIDE

HA360B and HA360BDB



Copyright © 2019 Sonic Alert. All right reserved.

IMPORTANT SAFETY INSTRUCTIONS

When using your HomeAware™ HA360B / HA360BDB, basic safety precautions should always be followed to reduce the risk of fire, electric shock or injury to persons including the following:

1. Read and understand all instructions, if there is something you do not understand please call our customer service.
2. Do not use any electrical product near a bathtub, washbasin, kitchen sink or laundry tub, in a wet basement, or close to a swimming pool or anywhere else there is water.
3. Do not use a telephone anywhere near a gas leak.
4. Avoid using a telephone (other than a cordless type) during a storm. There may be a risk of electrical shock from lightning and electrical storms.
5. Always unplug this product from the wall power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the product. Use a damp cloth for cleaning only.
6. Always place this product on a stable surface. Serious damage and/or injury may result if the product falls.

IMPORTANT SAFETY INSTRUCTIONS

7. Do not cover slots, vents or openings on this product. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
8. Always operate this product using electrical voltage as specified on the base unit or in the user guide. If you are not sure of the voltage in your home, consult your dealer or local power company.
9. Do not place anything on the power cord. Install the product where no one will step or trip on the cord.
10. Never push any objects through the slots in the product. They can touch dangerous voltage points or short-out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the product
11. Do not overload wall outlets or extension cords as this can increase the risk of fire or electrical shock.

IMPORTANT SAFETY INSTRUCTIONS

12. Unplug this product from the wall outlets and refer servicing to the manufacturer under the following conditions:
 - A. When the power cord or plug is damaged or frayed.
 - B. If water or liquid has been spilled into or on the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment may require extensive work by a qualified technician.
 - E. If the product has been dropped or if the case has been damaged in any way.
13. To reduce the risk of electrical shock, do not take this product apart. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

IMPORTANT SAFETY INSTRUCTIONS

14. Never install telephone wiring during a lightning storm.
15. Never install telephone jacks in damp or wet areas.
16. Never touch uninsulated telephone wires or terminals unless the telephone line and power supply have first been disconnected.
17. Always use caution when installing or modifying telephone lines.
18. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
19. This product should not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on or near the product.
20. Batteries shall not be exposed to excessive heat, such as sunshine or fire or any other heat source.
21. The HomeAware main unit's power supply plug is used as the disconnect device, which shall remain readily operable.

FEATURES

- The brightest and most colorful signaling receiver on the market today
- Connects to the HomeAware main unit, transmitters, and receivers
- Works with compatible Sonic Alert legacy receivers via the HomeAware bridge unit
- Blinks five unique colors to alert you to five differing alerts
- The bright flash duration is 0.04 seconds
- Simply press the link button on HA360B to link to HA360DB and other HomeAware receivers and transmitters
- Move the HA360B switch from receiver mode to master mode to reset the device
- A fully-charged battery lasts for 48 hours
- The battery charges fully within one hour
- One-year Sonic Alert warranty

 
OUT OF BOX FIRST TIME USE

1. Plug in the HA360B.
2. Charge the HA360B fully

TO USE THE HOMEWARE BLINK HA360B AS PART OF THE HOMEWARE SYSTEM

Linking:

- Set the Main / Receiver switch to Receiver. (see illustration for switch location)
- Set the HomeAware Main to link mode.
- Press the LINK button on the HomeAware Blink. It will glow purple for one second.

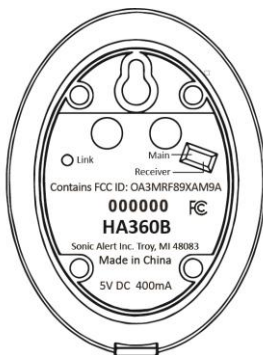

If there is a low battery on the HomeAware Blink, it will flash yellow every eight seconds.

 
If there is a low battery on the HomeAware Doorbell, the HomeAware Blink will flash green every eight seconds.

TO USE THE HOMEWARE BLINK DOORBELL HA360BDB AS A DOORBELL SIGNALER

Before linking please install batteries in your HomeAware doorbell.

Install Batteries

The HomeAware™ doorbell transmitter comes with two #357 silver oxide long-lasting batteries that need to be installed into the bottom of the unit. Once installed the red light should light when the button is pushed. If the light does not show, you may have the batteries in backward.

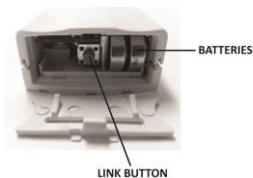

Linking:

- Press the LINK button on the HomeAware Doorbell. The HomeAware Blink will glow purple for one second.
- When the HomeAware Doorbell is pressed, the HomeAware Blink will flash four times and glow green.

SET UP FOR HOMEWARE DOORBELL HA360BDB

The Placement of the Doorbell Transmitter

Proper placement of the HomeAware™ doorbell transmitter is important because it uses Digital RF frequencies to send its signal. It's important to not place or install it on anything made of metal because RF signals cannot transmit through anything made of metal.

THE DOORBELL TRANSMITTER SET-UP

Installation and Set Up of Doorbell Transmitter

Note: There are two methods to install/set up the doorbell transmitter, both require batteries

1. Stand-alone no chime box. With this method no existing doorbell chime box is available. Placement of the transmitter must be within 50ft of the HomeAware™ Main unit (See Step 1 for doorbell transmitter set up below).
2. To the existing chime box. This is the preferred method as it keeps the transmitter out of the elements and in closer range to the main unit (See step 2 for doorbell transmitter to the existing chime box set up below).

Please determine which method you will use and continue with the following installation directions.

The DOORBELL TRANSMITTER SET-UP

Step 1) The Installation With No Existing Doorbell Chime Box

For this method, you will need the provided connector wire to install. We provide screws, and a mounting block (see diagram for transmitter installation on next page), also see step by step instructions.

 
To install to a hard surface using the provided hardware follow these steps:

- a) Install mounting block using the provided short screw. Install the small side to the surface (side without the arrow). This will provide a space for the unit to slide over to attach to the mounting block.
- b) Remove the screw cover at the top of the doorbell unit, the cover has the Sonic Alert logo on it; this will slide up to remove. Once removed, you'll see the top screw mounting hole.

THE DOORBELL TRANSMITTER SET UP CONTINUED

Step 1) The Installation with No Existing Doorbell Chime Box Continued


- c) Once the mounting block is in place, and you have removed the top screw cover, position the back of the doorbell transmitter over the mounting block. There is a square opening that the block will fit into (see below). The position that opens over the mounting block. Next slide the doorbell install the top screw. The doorbell unit should stay on by itself if installed correctly. If not then you may have the block mounted upside down, try reversing it.

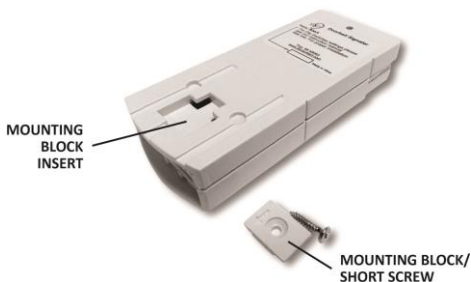

THE DOORBELL TRANSMITTER SET UP Continued

Step 1) The Installation with No Existing Doorbell Chime Box

 - d) Now that the doorbell unit is installed over the mounting block and in place, you now can install the long screw in the top hole, and replace the screw cover.

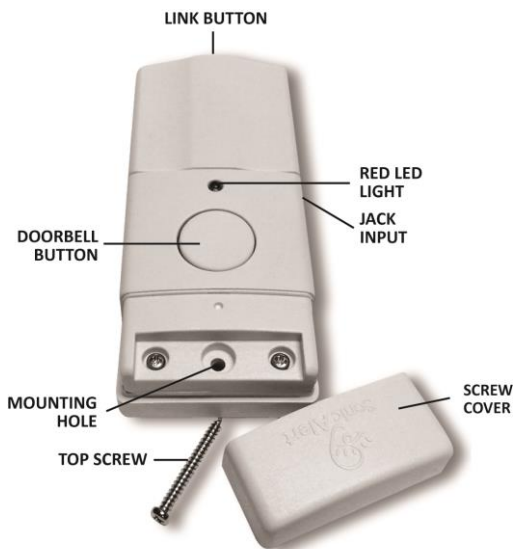

THE DOORBELL TRANSMITTER SET UP Continued

Step 2) The Installation to Existing Powered Door Chime

With this method, you can install the HomeAware™ transmitter to your existing AC powered doorbell chime. This method allows you to use the existing doorbell button so there aren't two buttons outside.

Use the provided connector wire to connect the doorbell transmitter to your existing AC powered chime box. Remove chime box cover and connect the red and white wires to the existing terminal screws (common and front) if connecting to the front door. Otherwise, you can connect the red and white wires to the (common and rear) screws for the rear door.

Next, plug the jack at the opposite end of the wire into the input on the side of the doorbell transmitter. To test press the existing doorbell button in your home, if the red LED lights up the installation was successful. If the red light does not light up check the wiring again, check if chime box has power, also was the existing chime working before you installed the wire? Please note not all doorbell chime boxes will work with the transmitter.

THE DOORBELL TRANSMITTER SET UP Continued

Mounting the Doorbell Transmitter

Use the provided hardware kit to mount the transmitter. See diagram above for doorbell transmitter set up.



REGULATORY COMPLIANCE

PART 68 OF FCC RULES INFORMATION

The HA360M complies with Part 68 of FCC Rules. You must, upon request, provide the FCC registration number and REN to your local phone company. Both numbers are shown on the HA360M's rating label.

REGULATORY COMPLIANCE CONTINUED

PART 15 OF FCC RULES INFORMATION

The HA360M complies with part 15 of the FCC rules, and with RSS-210 of Industry Canada. Operation is subject to the following two conditions; (1) This device might not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC rules. These limits are designed to provide responsible protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used per the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not interfere in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- i. Reorient or relocate the receiving antenna.
- ii. Increase the separation between the equipment and receiver.
- iii. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- iv. Consult the dealer and/or the experienced radio /TV technician for help.

Modification not expressly approved by the manufacturer and could void the user's authority to operate the equipment under FCC rules.

GENERAL DATA

UL listed Power Adaptor: AC100-240V~, 50/60Hz

Power Consumption: Adaptor Output: DC7.5V 2A

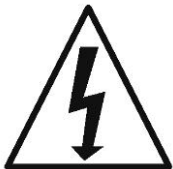

The Lightning flash and arrowhead within the triangle is a warning sign alerting you of dangerous voltage inside the product.

CAUTION:
TO REDUCE
THE RISK
OF
ELECTRICAL
SHOCK, DO
NOT
REMOVE THE
COVER
(OR BACK)
FROM THE
PRODUCT.
NO USER-
SERVICEABLE
PARTS
INSIDE.
REFER
SERVICING
TO YOUR
SONIC ALERT
DEALER.




The exclamation mark within the triangle is a warning sign alerting you of important instructions accompanying the product.

GENERAL DATA Continued

- Attention should be drawn to the environmental aspects of battery disposal.



-  This indicating separate collection for electrical and electronic equipment.

SONIC ALERT'S 1 YEAR LIMITED WARRANTY

The HomeAware™ HA360B is warranted against manufacturing defects in materials and workmanship for one (1) year from the date of purchase. Within this period Sonic Alert will repair or replace at our option the HomeAware™ HA360B without charge for parts and labor.

Simply contact our customer service department to obtain an RMA (return authorization number) and instructions on how to process your product for return. Send an e-mail to customerservice@sonicalert.com. You'll need a copy of your receipt to process the return authorization.



Sonic Alert Warranty Center
850 Stephenson Hwy, Suite 323, Troy, MI 48083